KEY

NON-PATIENT **ROOM**



- CAN ONLY BE USED IN NON-PATIENT CARE ROOMS
- CAN BE IDENTIFIED BY THE "U.L." LABEL ON THE STRIP

THERE ARE THREE TYPES OF POWER STRIPS USED AT MICHIGAN MEDICINE:

- FREQUENTLY HAVE SWITCHES
- CAN BE SET ON FLOORS, FURNITURE, ETC.





AREA OUTSIDE PATIENT CARE VICINITY



POWER STRIPS WITH HOSPITAL GRADE RECEPTACLES LISTED TO U.L. 1363

- PERMITTED IN PATIENT ROOMS ONLY BEYOND THE 6'-0" PATIENT CARE VICINITY
- ALSO APPLIES TO STAFF WORKSTATIONS IN OPEN-BAY PATIENT CARE **AREAS**
- PERMITTED ONLY FOR NON-PATIENT CARE EQUIPMENT
- CAN BE IDENTIFIED BY GREEN DOTS, "U.L. 1363" LABEL AND NO SWITCH
- MAY NOT BE SET ON FLOORS
- MUST BE SCREWED TO CARTS, EQUIPMENT OR FURNITURE (NOT ZIP-TIED, TAPED OR STRAPPED)








PATIENT CARE




- ONLY POWER STRIPS PERMITTED WITHIN THE 6'-0" PATIENT CARE VICINITY
- APPLIES TO INPATIENT OR OUTPATIENT SITUATIONS
- SPRPT ARE FOR PATIENT CARE EQUIPMENT ONLY, INCLUDING WORKSTATIONS ON WHEELS ("WOWS")
- SPRPT MUST BE SCREWED TO CART, EQUIPMENT OR FURNITURE (NOT ZIP-TIED, TAPED OR STRAPPED)
- INDIVIDUAL PLUGS MAY OR MAY NOT BE SECURED WITH SELF-LOCKING COVERS DEPENDING ON MANUFACTURER
- THESE CAN BE IDENTIFIED BY GREEN DOTS, THE 'U.L. 60601-1" OR "U.L. 1363A" LABEL AND NO SWITCH





NON-PATIENT ROOM

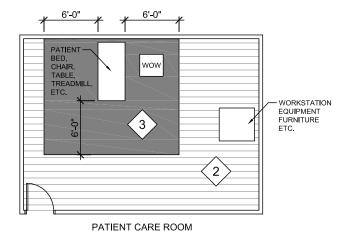

NOTE: ALL FLEXIBLE CORDS AND CABLES SHALL BE USED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE (NEC) NFPA-70/400.8 IN EFFECT

- EXTENSION CORDS ARE NOT ALLOWED TO EXTEND THE REACH OF POWER STRIP CORDS
- POWER STRIP CORDS ARE NOT ALLOWED TO RUN THROUGH HOLES IN WALLS, CEILINGS, FLOORS, DOORWAYS, WINDOWS OR SIMILAR OPENINGS
- POWER STRIPS ARE NOT ALLOWED TO BE ATTACHED TO BUILDING SURFACES SUCH AS WALLS, FLOORS, CEILINGS,
- POWER STRIPS AND CORDS SHALL NOT BE INSTALLED WHERE SUBJECT TO PHYSICAL DAMAGE



2101 Commonwealth, Suite B Ann Arbor, MI 48105 FAX: (734) 763-0417

www.med.umich.edu/facilities/plan

FILE: D262726H-1.dwg ISSUE: November 2018